

ANNA & ANTON

Anna & Anton G1

Quick Install Guide Manual SIM Card Registration

www.annaanton.com

Manual v1.0.0

QUICK INSTALLATION GUIDE

Instructions for use:

1. Unpack and check the content
The package should include:
 - watch
 - sim card
 - manual
 - charging cable

2. Register your sim card
Option 1: Use the sim card provided and follow the steps in the documentation that is included with it (for more detailed information go to section **Sim card registration**)
Option 2: Use your own sim card with internet connection. It has to be a micro sim without PIN code.

How to insert the SIM card correctly



3. Watch registration
On the back of the watch you will find its ID. You have to register it on the following link:
<https://admin.annaanton.com/signup.php>

Or scan the following QR code



4. How to connect to the app
- go to my.annaanton.com
- use the email and password that you entered upon registration

Or scan the following QR code

On the Dashboard you will see the watch you have registered. Press the button "Go to APP" in the menu on the left to enter the web application

5. Support
If you need any support or have questions about the use of the device press the button "Support" on the menu on the left and create a ticket after you are redirected to the support page.

MANUAL



What is Anna & Anton?

Thanks to the GPS technology you will be able to know where your kids are at any given moment without disrupting their games and invading their personal time and space.
Product functions:

- GPS+LBS+WIFI real-time positioning, 1.22" touchscreen colorful display
- Two-way phone call and voice chat, GEO fence safety area
- SOS Phone call and alert

1. Please read the instruction before installing and using the watch

Before use:
a. Check if the package contains the following items:

- watch, sim card, manual, charging cable

b. You can activate and use the sim card provided or use your own, which has to have internet data and no PIN code

Note: The device should be charged using the cable provided in the package and laptop or PC

2. Device basics



- 3.1 Phone calling can be answered by touching screen buttons and on hook by pressing the power button


- 3.2 Phonebook: Up to 10 numbers can be inserted from the app and the your kid can choose between them

- 3.3 Talk (chat) : you can leave message to your child using the app. The kid can read them and leave you a 15 seconds voice message. To make a record she or he has to keep his finger on the display while talking. The voice message will be sent automatically to your app account.

- 3.4 Step: The pedometer is counting the steps your kid makes while wearing it.

4. Connecting the watch with the APP
The app for the device is found at my.annaanton.com. The page can be accessed from any device - laptop, PC, tablet or phone regardless of the environment and operation system. The only thing you need is internet connection.

Or scan the following QR code

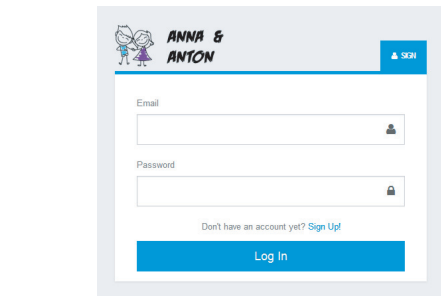

Login using your email and password you used when registering your watch.

If you have not registered yet please follow the instructions:
On the back of the watch you will find its ID. You have to register it on the following link:
<https://admin.annaanton.com/signup.php>

Or scan the following QR code


- 4.1 How to use the APP?

On the top row from left to right the tabs are as follows:



Localization, history, chat, events, settings
The tab containing the circle with a person inside is the safety zone indicator and the watch above it shows whether the watch is on your kid's wrist.

The tab in the centre under the top row contains the watch nickname and the pin is the last location recorded.


On the bottom row from left to right the tabs are as follows:
Battery level, Location signal, Given rewards, Steps for the day, GSM Signal strength. The menu in the bottom right corner allows you to monitor all the watches associated with your account

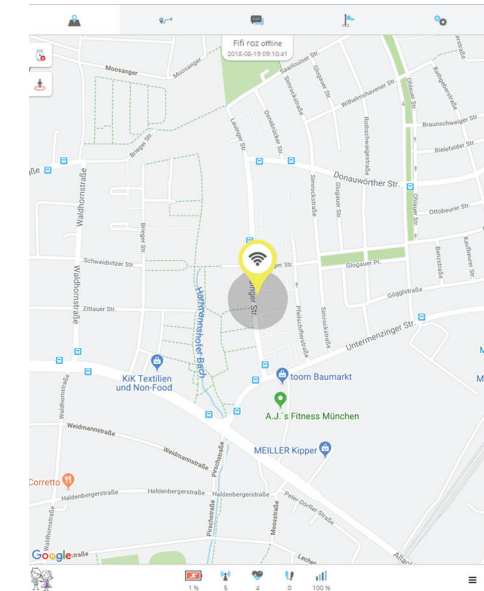


History tab:
In this tab you can see the history of the locations your kid has been at.Using the drop-down menu you can choose any of the last 30 days of use. Also, you can click on the pin and you will be shown the time and date of the specified location.

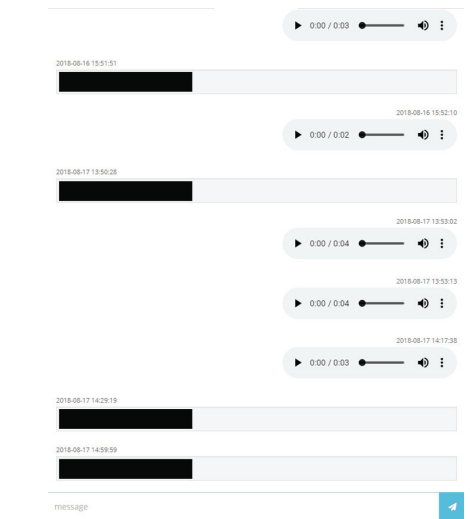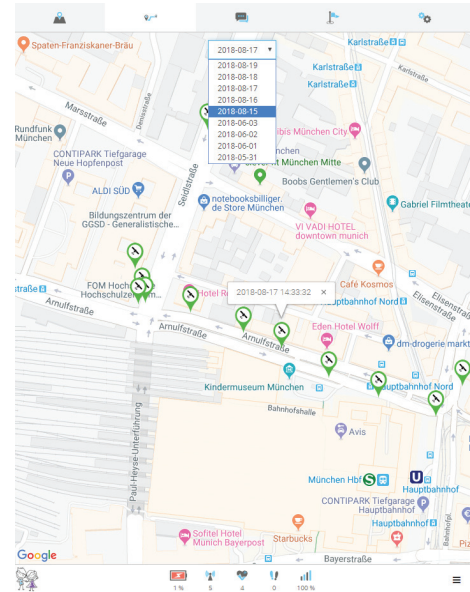

Chat tab:
In this tab you can communicate with your kid while he or she is outside. Write a message in the message area and press the blue button. When you child replies, you will see the recording appearing in the history session. Press the play button to listen to the message.

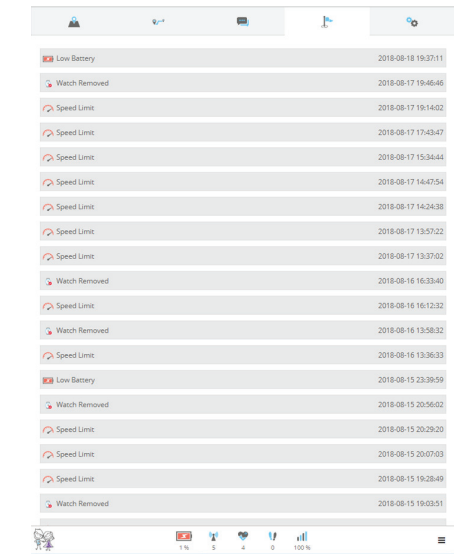

Events Tab:
The watch has the following features installed:
battery, speed and watch removal sensors and safety zone.When any of those events occurs, the event is recorded and notification is sent to you via email if the option is activated from the settings field. Also, an event is recorded when the SOS button is pressed.

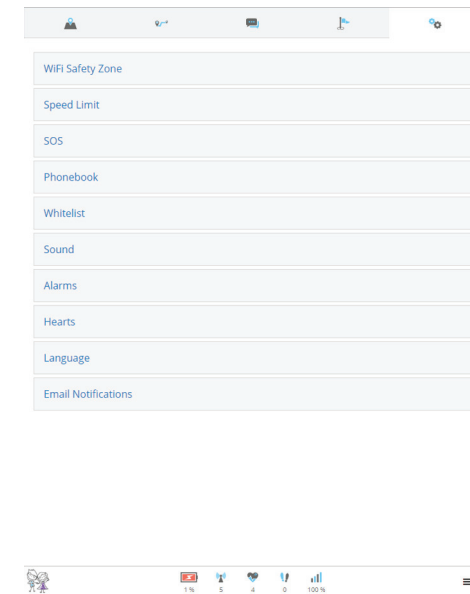

In the settings tab you can manage all the features that are provided by the app. This is done simply by clicking on the desired option and choosing or inserting you values.

WiFi Safety Zone: Choose a zone that the watch will mark as safety zone. Every time the watch enters or leaves this zone you will receive notification. The watch recognizes the 5 wifi zones with strongest signal. (2,4 GHz WiFi Networks only)

Speed Limit: You can activate the watch sensor to track the speed and set a limit for it you will receive a notification every time the device moves at speed faster than that.

SOS: By pressing and holding the SOS button the watch will start calling the numbers that are in the SOS list in the order you have inserted them. If the first one does not answer it will keep calling until one of them picks up or the numbers in the SOS list are over. Also, you will receive notification when that happens. (The sim card should have the voice function activated in order for the SOS calling to work properly)

Phonebook: A list of 10 numbers that can be dialed directly from the watch.

Whitelist: The watch can only receive calls from five specified numbers.Calls from numbers not included in that list will be automatically blocked.


Sound: Choose how the watch will notify your kid upon incoming call.

Alarms: You can set days and time for the alarm on the watch.

Hearts: Rewards that you can send to the watch.

Language: Choose the language of the application.
Email Notifications: Choose the events that you want to be notified for.

- 4.2 How to use the admin panel

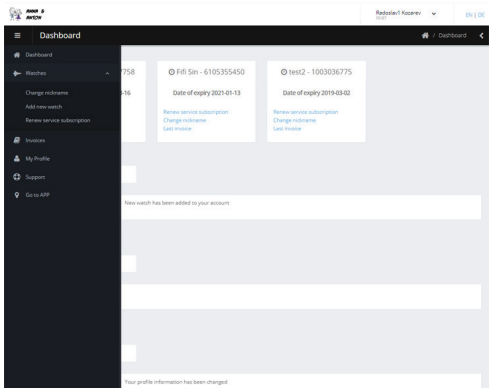

The tabs in the menu on the left are as follows: Dashboard, Watches, Invoices, My Profile, Support, Go to APP

Dashboard: Here you can see all the watches associated with your accounts and the dates of their subscription expiration. Every watch has three links under its Date of expiry - subscription renewal, change of nickname and track of the last invoices.

Watches: Here you can change a watch nickname, renew its subscription or add new watch to your account.

Invoices: Here you can keep track and download your invoices.

My Profile: You can manage your personal information.

Support: When you need any support about the use of the watch or app you can use our ticket system to leave a message. We will reply as soon as possible.

Go to APP: By pressing this button you will be redirected to the application <https://my.annaanton.com/#live>.

 
SIM CARD REGISTRATION

This is the information that you need for registration of the SIM card:

- Name, Adresse, Date of birth
- Valid Personal ID or in some cases overseas passport
- Phone number and activation number
(you can find the activation number written on the SIM Holder)

Please go to the following website to active your SIM and search for Sim card activation button:
www.k-classic-mobil.de

Or scan the following QR code

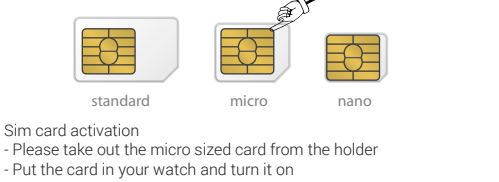

Sim card activation
- Please take out the micro sized card from the holder
- Put the card in your watch and turn it on

